



With the **HERDER® Mowing Bucket** MSF-MXL-MXZ you will take the advantage of more than 45 years experience!

MACHINE FACTORY HERDER B.V.



Mowing bucket on an excavator



From one side it is possible to mow both taluds as well as the bottom and the vegetation can be removed



Transport position with a hydraulic tipping head left (HKL)



Booms especially made for mini excavators



Extension piece

Extension pieces will be available in different lengths and with or without tumbling piece



Mowing bucket MSF

For mini excavators

Mowing bucket 620



A compact and safe transport position



A very high capacity can be reached with a mowing bucket MXZ620

HERDER

Details mowing bucket



Standard with a long knife head connection



Knife head connection has less maintenance



Solid spring system



Knives can be easily changed



Standard basis suspension piece



Heavy suspension pin



Self-grinding knives (MSFT-MXLT-MXZT)



Knives to be grinded (MSFG-MXLG-MXZG)





Hydraulic tipping head left (HKL) to be mounted on the boom of excavators directly

Options



Extension and side racks



Hydraulic tipping head right (HKR) meant for excavators with an extension piece



Hydraulic rotation head meant for hydraulic excavators

Mowing bucket mounted on a Herder® machine



Transport position of a Cavalier MBK120



Transport position of a Grenadier MBK115LS Pro



Hydraulic tipping head right (HKR) meant for Herder® machines



Transport position of a Grenadier MBK 512/513

Technical details of HERDER® MX mowing bucket

	Type and width in cms	Frame height in cms	Oil pressure in bar	Required oil in ltr/min.	Weight in kgs
Mini excavators	MSFT 200B	40	150	22	180
	MSFT 250B	40	150	22	208
Tractor machines	MXLT 250B	50	150	36-40	293
	MXLT 300B	50	150	36-40	325
	MXLT 430B	50	150	36-40	393
	MXLT 550B	50	150	36-40	464
Hydraulic excavators	MXZT 250B	50	150	36-40	332
	MXZT 300B	50	150	36-40	370
	MXZT 430B	50	150	36-40	442
	MXZT 550B	50	150	36-40	553
	MXZT 620.HKLR + CW 2-4	50	150	80	1120



HERDER B.V., P.O. Box 8010, NL-4330 EA Middelburg
 Telephone +31 (0)118 679 500
 Spare parts +31 (0)118 679 550
 Fax +31 (0)118 638 730

Herculesweg 6, Industrial zone "Arnestein", NL-4338 PL Middelburg

E-mail: sales@herder.nl"

Website: <http://www.herder.nl>

Dealer: