



HERDER® Attachments



Your machine will be usable the whole year when you have one of these attachments on your HERDER® boom! Through this you can earn to repay your investment quickly



MACHINE FACTORY HERDER B.V.



Verge maintenance (Eco mower)



Standard Eco mower



Eco mower with auger unit for suction



Eco mower with bottom fraise



More material will run through in case of a hydraulically folding front side



A heavy conveyor belt to work under extra difficult conditions



A standard conveyor belt to work under normal conditions

Eco mower differences of flails



Flails 40x12



Wood flails

Eco mower Options



Hydraulic rotation head 90° (SS.HD90)



Hydraulic rotation head 180° (SS.HD180)



Hydraulic rotation head 90° with mechanical free travel construction (SS.HDP90)



Hydraulic rotation head 180° with mechanical free travel construction (SS.HDP180)



Worm wheel with hydraulic free travel construction (SS.HWHP180)



Worm wheel with mechanical free travel construction (SS.HWP180)

Verge maintenance (continuation)



Disc mower (SMM170.SS)



Guard rail mower appropriate for suction (VRMA.SS)



Standard guard rail mower (VRM.SS)



Dredging bucket (BL150.SS). Also available in lengths of 100-150-200 cms

Slope maintenance



Top mower Busatis (TMB225.SS)



Bowed Top mower (TMB200/70.SS)



Excavator bucket 60 cms (GB60.SS)



Mowing rake combination



Top rake light (THL13.SS)



Top rake heavy (THZ13.SS)





MACHINE FACTORY HERDER B.V.

Trees and hedges



Heavy stump cutter (SFV800.SS)



Threefold saw unit with double rotation head (CZH3x75.SS.HD105HK)



Saw unit (CZ90.SS)



Hydraulic tree cutter (KSZ75)



Heavy hedge cutter with double rotation head (HGR300.SS.HW180HK)



Light hedge cutter (HSR150-180-250)



With a hedge topper it is possible to mow and to shred in one movement



Stump cutter light (SFL35.SS)



Hedge topper. To be used in each position (SGMH150.SS.HD90 HW180HK)

Special attachments



Weeds brush (OB.SS)



Hydraulic water pump 6500 ltrs/min. (WHP1.SS)



HERDER B.V., P.O. Box 8010, NL-4330 EA Middelburg
 Telephone +31 (0)118 679 500
 Spare parts +31 (0)118 679 550
 Fax +31 (0)118 638 730
 Herculesweg 6, Industrial zone "Arnestein", NL-4338 PL Middelburg
 E-mail: sales@herder.nl
 Website: http://www.herder.nl

Dealer:

