



HERDER® Grenadier MBK115LS PRO

MACHINE FACTORY HERDER B.V.



-Long reach of 8,5 mtrs but still under 4 mtrs during transport. This will be possible with the HERDER® four-part boom. The new 2 handle control will give the driver an ergonomic well considered posture during work



A reach till 11 mtrs will be available on request



Supporting frame



The hydraulic components can be easily reached for maintenance



Supporting frame with suction ventilator



A big oil cooler of 13.2 kW will be standard



Tool box and lightning are standard accessories

Control



The compact control box can be placed everywhere in the cabin



Standard electric 2 handle control
Menu 1 : euro control for mowing buckets
Menu 2 : one handle control to work during moving.

This menu adjustment enlarges the availability of a experienced excavator driver with a tractor machine



One handle control to work during moving

Stabilization cylinder



Standard stabilization cylinder



Stabilization cylinder for suspension front axle

HERDER

Transport



Even with a mowing bucket of 430 cms the transport position will be according the European legislation



Options



Supporting wheel instead of supporting plate



Wheel set for (de-)mounting




Towing hook



Counter weights



Hydraulic QD fast connecting system for the (de-)mounting

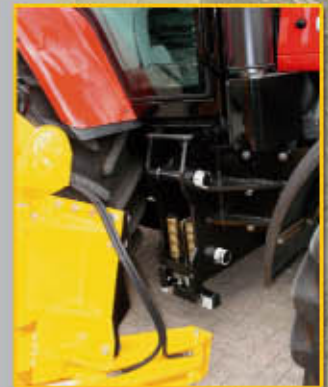



Standard equipped with a mechanical QD fast connecting system

Technical details Grenadier MBK115LS Pro

Pump capacity at 1000 rev./min. PTO:

● Attachments 150 bar	15-55 ltrs
● Attachments 250 bar	30-120 ltrs
● Control valve + floating system	140 ltrs
● Minimal tractor capacity	95 kW
● Minimal tractor weight	5500 kgs
● Oil cooler	yes
● Tank capacity hydraulic oil	200 ltrs
● HERDER fast connecting system for attachment	yes
● Lifting capacity with standard boom length	850 kgs
● Standard reach with mowing bucket	730 cm

Options

- High pressure construction (LSH) for attachments (130 ltrs/min. at 350 bar)
- Suction unit (110 ltrs/min at 420 bar)
- Boom lengths with a reach till 11 mtr
- Supporting wheel instead of supporting plate
- Hydraulic QD fast connecting system for quick (de-)mounting of the machine
- Counter weights
- Biodegradable oil
- Towing hook ball or pin
- Extra control section
- Extra hydraulic supplies to drive, adjust and control special attachments
- Couple plates to fix a warning sign

MACHINE FACTORY HERDER B.V.

HERDER



HERDER B.V., P.O. Box 8010, NL-4330 EA Middelburg

Telephone +31 (0)118 679 500

Spare parts +31 (0)118 679 550

Fax +31 (0)118 638 730

Herculesweg 6, Industrial zone "Arnestein", NL-4338 PL Middelburg

E-mail: sales@herder.nl

Website: <http://www.herder.nl>

Dealer: